

## Moisture meter

# Operating Manual

## humimeter FLS


Moisture meter with insertion probe  
for measuring the moisture content of hay



78,0°F | 6,16% | 456kg/m<sup>3</sup> | -27,3td | 0,64aw | 51,9%r.H. | 14,8%abs | 100,4g/m<sup>2</sup> | 09m/s | 4,90Ugl | 1

## Your humimeter FLS at a glance

### The main unit

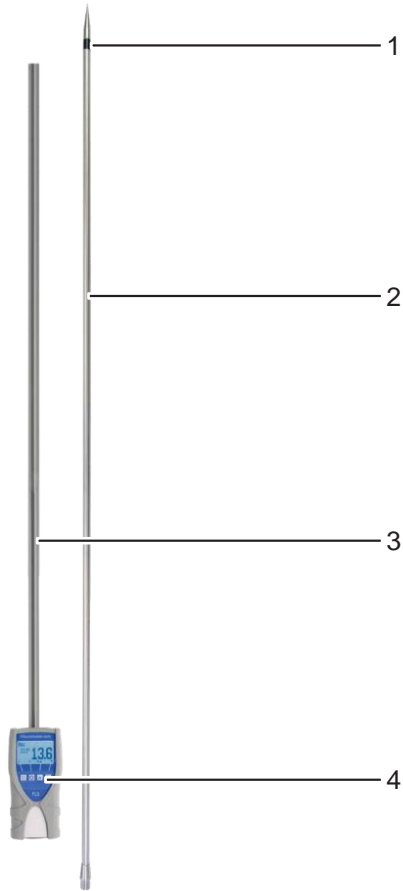

No	Name
1	Measuring head
2	Insertion probe
3	Insertion probe
4	Electronics in plastic housing

---

## The main unit in detail



No	Name
1	USB port (optional)
2	Display
3	Keypad
4	Rubber protection cover

## Rear of the main unit



No	Name
1	Battery compartment
2	Handle bar

## The display



No	Name
1	Calibration curve
2	Moisture content % (" <a href="#">6.1 How moisture is defined</a> ")
3	Display symbols
4	Temperature display

## The display symbols


Symbol	Name	Symbol	Name
	Enter		No
	Up		Change input level
	Down		OK
	Back		Change menu
	Enter numbers		Enter data
	Enter letters		View measurements
	Continue / go right		Delete measurements
	Left		On/off button, display light
	Yes		Save measured value

---

## The menus


The device has four different menus: Data Log, product selection, additional function and main menu:

### Data Log menu

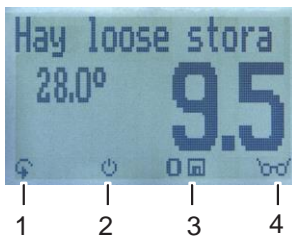


No	Name
1	Change menu
2	Display illumination / device on/off
3	Save measured value
4	Show the last recorded values

### Product selection menu

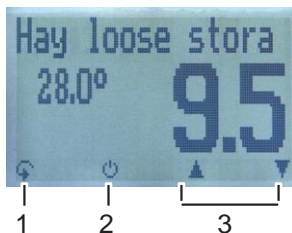

No	Name
1	Change menu
2	Display illumination / device on/off
3	For changing the calibration curve

### Additional function menu

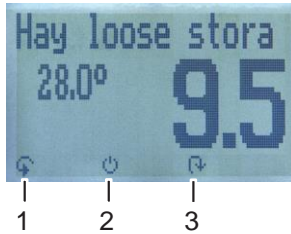

No	Name
1	Change menu
2	Display illumination / device on/off
3	Mirror display

### Main menu

The main menu comprises the following menu items:

- **Edit Logs:**  
Manual Logs, Clear Logs
- **Print Logs:**  
Last Log, All Logs, Clear Logs
- **Send Logs:**  
Manual Logs, Clear Logs
- **Options:**  
Bluetooth, Date/Time, Log Time, Language, Unlock, °C/°F, BL On Time, Auto Off Time, Materialcalib., Password, Reset
- **Status**

---

## Table of contents

<b>Your humimeter FLS at a glance .....</b>	<b>2</b>
The main unit .....	2
The main unit in detail .....	3
Rear of the main unit .....	3
The display .....	4
The display symbols .....	4
The menus.....	5
<b>1. Introduction.....</b>	<b>10</b>
1.1 Information about this operating manual .....	10
1.2 Limitation of liability .....	10
1.3 Symbols used in this manual .....	11
1.4 Customer service .....	11
<b>2. For your safety.....</b>	<b>12</b>
2.1 Proper use.....	12
2.2 Improper use.....	12
2.3 User qualifications .....	12
2.4 General safety information .....	12
2.5 Warranty.....	13
2.6 Packaging.....	13
<b>3. On receipt of your device.....</b>	<b>14</b>
3.1 Taking the device out of its packaging .....	14
3.2 Making sure that all of the components have been included.....	14
3.3 Assembling the insertion probe .....	15
3.4 Inserting batteries .....	15
<b>4. Using the device - Basics .....</b>	<b>16</b>
4.1 Switching the device on.....	16
4.2 Selecting the calibration curve.....	16

---

4.3	Taking a measurement .....	17
4.4	Mirroring the display .....	17
4.5	Switching the device off .....	17
<b>5.</b>	<b>The measuring process .....</b>	<b>18</b>
5.1	Preparing a measurement .....	18
5.2	Taking a measurement .....	18
5.3	Hold function - Freezing the displayed values.....	20
5.3.1	Activating the hold function in the options menu .....	20
5.3.2	Using the hold function .....	20
5.4	Saving individual readings .....	21
5.4.1	Activating the manual saving function in the options menu.....	21
5.4.2	Using the manual saving option .....	21
5.5	Saving several readings (a measurement series) at the same time.....	22
5.6	Viewing individual readings .....	24
5.7	Viewing individual readings from a series of measurements.....	24
5.8	Deleting all measured values (data log) .....	25
5.9	Deleting individual measurement series .....	25
5.10	Deleting single values from a series of measurements.....	26
<b>6.</b>	<b>Calibration curves.....</b>	<b>27</b>
6.1	How moisture is defined.....	27
6.2	Notes for comparative measurement with oven-drying method.....	27
<b>7.</b>	<b>Using the LogMemorizer program .....</b>	<b>28</b>
7.1	Installing / opening the program .....	28
7.2	Exporting measured values to a computer .....	29
<b>8.</b>	<b>Checking on the device's status.....</b>	<b>31</b>
<b>9.</b>	<b>Configuring the device .....</b>	<b>32</b>
9.1	Turning on Bluetooth .....	32
9.2	Adjust the date/time .....	32
9.3	Selecting a language .....	33

---

9.4	Activating options.....	33
9.5	Deactivating options.....	34
9.6	Selecting °C/°F.....	34
9.7	Reducing the device's power consumption.....	35
9.7.1	Configuring the display illumination time.....	35
9.7.2	Configuring automatic switch-off.....	35
9.8	Configuring the material calibration function.....	35
9.9	Changing the password.....	36
9.10	Resetting the device to its factory settings.....	37
<b>10.</b>	<b>Cleaning and maintenance.....</b>	<b>37</b>
10.1	Changing batteries.....	37
10.2	Care instructions.....	38
10.3	Cleaning the device.....	38
<b>11.</b>	<b>Faults.....</b>	<b>39</b>
<b>12.</b>	<b>Storage and disposal.....</b>	<b>40</b>
12.1	Storing the device.....	40
12.2	Disposing of the device.....	40
<b>13.</b>	<b>Device information.....</b>	<b>41</b>
13.1	CE declaration of conformity.....	41
13.2	Technical data.....	45
<b>14.</b>	<b>Notes.....</b>	<b>46</b>

## 1. Introduction

### 1.1 Information about this operating manual

This operating manual is designed to enable you to use the humimeter FLS safely and effectively. It is part of the device, has to be stored nearby and must be easily accessible to users at all times.

All users are required to carefully read and make sure that they have understood this operating manual before using the humimeter FLS. All of the safety and operating instructions detailed in this manual have to be observed to ensure the safety of the device.

### 1.2 Limitation of liability

All of the information and instructions provided in this operating manual have been compiled on the basis of the current standards and regulations, the state of the art, and the extensive expertise and experience of Schaller GmbH.

Schaller GmbH does not accept any liability for damage associated with the following, which also voids the warranty:

- Non-observance of this operating manual
- Improper use
- Inadequately qualified users
- Unauthorised modifications
- Technical changes
- Use of unapproved spare parts

This fast measuring procedure can be affected by a range of different factors. For this reason, we recommend periodically checking the device's measurements with a standardised oven-drying method.

We as the manufacturer do not accept any liability for any incorrect measurements and associated consequential damage.

---

### 1.3 Symbols used in this manual

All the safety information provided in this manual is shown with a corresponding symbol.



#### **CAUTION**

It is essential to observe this warning. Non-compliance can lead to injury.



#### **ATTENTION**

It is essential to observe this warning. Non-compliance can lead to damage to property or equipment.



#### **Information**

This symbol indicates important information that enables users to use the device more efficiently and cost-effectively.

### 1.4 Customer service

For technical advice, please contact our customer service department at:

Schaller GmbH  
Max-Schaller-Straße 99  
A - 8181 St.Ruprecht an der Raab

Telefon: +43 (0)3178 28899  
Fax: +43 (0)3178 28899 - 901

E-Mail: [info@humimeter.com](mailto:info@humimeter.com)  
Internet: [www.humimeter.com](http://www.humimeter.com)



© Schaller Messtechnik GmbH 2024

## 2. For your safety

The device complies with the following European directives:

- Restriction of Hazardous Substances in Electrical and Electronic Equipment (RoHS)
- Electromagnetic compatibility (EMC)

The device corresponds to state-of-the-art technology. However, it is still associated with a number of residual hazards.

These hazards can be avoided through strict observance of our safety information.

### 2.1 Proper use

- Easy to use device for quickly measuring the moisture content of hay
- The device must only be used for taking measurements on the products defined in the following sections of this manual (see "[6. Calibration curves](#)"es").

### 2.2 Improper use

- The device is not suitable for measuring mouldy or rain wet hay.
- The device is not waterproof and must be protected from water and fine dust (IP40).

### 2.3 User qualifications

The device must only be operated by people who can be expected to reliably take the measurements. The device must not be operated by people whose reaction times may be slowed due to, e.g. the use of drugs, alcohol or medication.

All persons using this device must have read, understood and follow the instructions provided in the operating manual.

### 2.4 General safety information

The following safety information has to be observed at all times to avoid damage to objects and injury to people:

- Remove the batteries if the device isn't used for a prolonged period of time.
- Keep the measuring head away from your body throughout all activities.
- Keep the measuring head away from other people throughout all activities.

- 
- In case of damages or loose parts on the device, remove the batteries and contact Schaller GmbH or your dealer.

All of the device's technical features have been inspected and tested before delivery. Every device has a serial number. Do not remove the tag with the serial number.

## 2.5 Warranty

The warranty does not apply to:

- Damage resulting from non-observance of the operating manual
- Damage resulting from third-party interventions
- Products that have been used improperly or modified without authorisation
- Products with missing or damaged warranty seals
- Damage resulting from force majeure, natural disasters, etc.
- Damage from improper cleaning
- Batteries older than six months
- Damage resulting from improper strain (pressure, bending) of the insertion probe or the measuring head
- Damage by dropping the measuring head

## 2.6 Packaging

- Do not discard the packaging!
- In case of returning the device for a warranty claim, the original packaging must be used.
- » We refuse any liability for damages during transport using inadequate packaging.

## 3. On receipt of your device

### 3.1 Taking the device out of its packaging

- Take the device out of its packaging.
- Next, make sure that it is not damaged and that no parts are missing.

### 3.2 Making sure that all of the components have been included

Make sure that all of the components have been included by checking the package contents against the following list:




- humimeter FLS
- Insertion probe
- 4 pieces of AA Alkaline batteries
- Rubber protection cover
- Handle bar
- Cardboard cylinder
- Operating manual

Optional accessories:

- humimeter USB data interface module - USB flash drive with software and USB-cable or download using [humimeter.com/software](http://humimeter.com/software)
- Battery operated portable thermal printer (only possible together with humimeter USB data interface module) - Described in a separate operating manual
- Bluetooth module (only possible together with humimeter USB data interface module) - Described in a separate operating manual
- Test block

### 3.3 Assembling the insertion probe

1. Put the device and the second part of the insertion probe on a flat surface (e.g. on a table).
  - » The two ends with cables must be adjacent to each other (figure 1).
2. Connect the plug-in connector (figure 2).
  - » It is not necessary to pay attention to correct polarity.
  - » You may need a pair of tweezers to pull the plug out of the insertion probe mounted on the device.
3. Put the two parts of the insertion probe together (figure 3).
- » Make sure that the holes for the screws are aligned correctly (figure 4).
4. Fix the insertion probe by tightening the two delivered screws (M3x5) (figure 5).

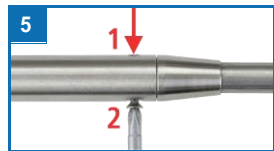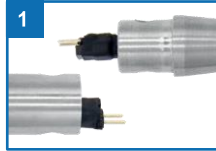

### 3.4 Inserting batteries

1. Remove the rubber protection cover. To do so, hold the rubber protection cover at the upper side and pull it over. If your device is provided with an optional USB port, remove the protection cap of the USB socket before (figure 6 and 7).
2. Remove the handle bar by unscrewing it counter clockwise (figure 8).
3. Take hold of the device with one hand, press your thumb onto the engraved area of the battery compartment (1) and drag downwards (2) (figure 9).



4. Insert the batteries with negative and positive terminals matching those indicated on the battery compartment. Press down the batteries so that they lay flat on the bottom of the housing (figure 10).




- » As soon as all batteries have been inserted, the device switches on automatically.

5. Push the battery cover onto the housing until it clicks into place. Then mount the rubber protection cover onto the housing, beginning at the end where the battery compartment is situated (figure 11).



## 4. Using the device - Basics

### 4.1 Switching the device on





- Press the  button for 3 seconds.
- » The display will then show the status indicator (figure 12).
- » After inserting the batteries, the device switches on automatically.





### 4.2 Selecting the calibration curve

**To do so:** The device has to be in the product selection menu (figure 13).

For an overview of the different calibration curves and the criteria for selecting them, please refer to "6. Calibration curves"es".

1. Press the  or  button to move from one product to the next Or
2. Press the  or  button for 3 seconds to open the calibration curve overview (figure 14).
3. Use the arrow keys to move from one calibration curve to the next
4. and keep any of them pressed to scroll through the types.

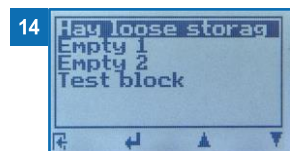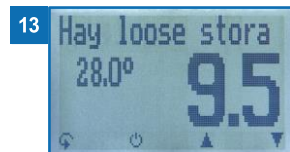

---

5. Confirm your selection by pressing .


- » The calibration curve you selected will now be shown at the top of the display.



### 4.3 Taking a measurement

- For information on how to take a measurement, see section "5. The measuring process".

### 4.4 Mirroring the display

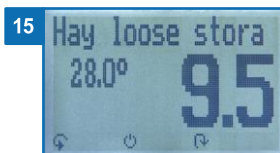**To do so:** The device has to be in the additional function menu (figure 15).



- Press the  button to mirror the display.
- Press the  button to reverse the mirroring of the display.

### 4.5 Switching the device off



**To do so:** The device has to be in the product selection, the Data Log or the additional function menu. It is not possible to switch off the device when it is in the main menu.


- Press the  button for 3 seconds.

## 5. The measuring process

### 5.1 Preparing a measurement

**To do so:** The device has to have nearly the same temperature than the product to measure. It is recommended to let your humimeter device adjust to the surrounding temperature before the measurement.



1. Switch on the device (see "4.1 Switching the device on").
2. Select the desired calibration curve (see "6. Calibration curves"es") by pressing the  or  (see "4.2 Selecting the calibration curve"rve") (figure 17).

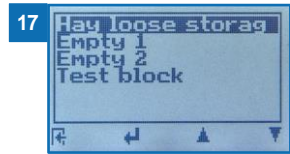

### 5.2 Taking a measurement

**To do so:** The device has to have nearly the same temperature than the product to measure.

- Insert the measuring head of the device straight into the hay (figure 18).
- » Take care of the surroundings when inserting the probe!
- » Do not bend or drop the measuring head!
- The device will now instantly display the moisture content on the display (figure 19).
- » The displayed value flashes when the moisture content exceeds the measuring range of the selected calibration curve (figure 20). A flashing value signals lowered accuracy of the measurement. The measuring range is dependent on the calibration curve (see "6. Calibration curves"es").
- » Once the reading has been taken, it can be saved on the device (see "5.4 Saving individual readings" or "5.5 Saving several readings (a measurement series) at the same time").

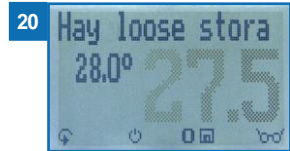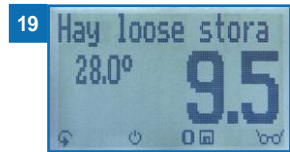



## CAUTION

### Risk of injury

Risk of injury due to the measuring head

- ▶ Keep the measuring head away from your body throughout all activities.
- ▶ Keep the measuring head away from other people throughout all activities.
- ▶ Keep the measuring head away from current lines.
- ▶ Take care of the surroundings when inserting the probe to avoid damage to objects and injury to people.



## Information - Measuring accuracy

This rapid and non-destructive measuring procedure allows you to take moisture readings at a number of different points. When saving the individual readings, the device will automatically calculate the readings' average (see "[5.5 Saving several readings \(a measurement series\) at the same time](#)").



## Information - Incorrect readings













Always make sure to select the correct calibration curve for the material you are measuring. This prevents taking incorrect readings (see "[11. Faults](#)").



## 5.3 Hold function - Freezing the displayed values

The device can be configured in such a way that the information being shown on the display will freeze at the touch of a button until a new button is pressed. This function can be very useful when e.g. taking readings in spaces where it is not possible to see the display (e.g. overhead).

### 5.3.1 Activating the hold function in the options menu



**To do so:** The device has to be switched on and be in the product selection menu.

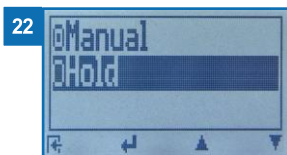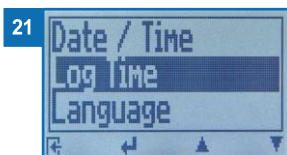
1. Press  three times or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Log Time** (figure 21). To do so, press  or  and confirm by pressing .
4. Select **Hold** (figure 22). To do so, press  or  and confirm by pressing 
  - » The setting has been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.



### 5.3.2 Using the hold function

**To do so:** The device has to be switched on and be in the Data Log menu (see "The menus" page 5).

- Press .
- » The current reading will be frozen. All of the four symbols will now be displayed as  (figure 23).
- To reactivate the frozen display, simply press any button.

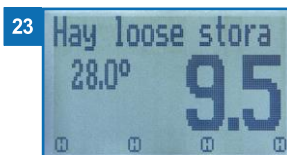















## 5.4 Saving individual readings

The device can be configured in such a way that the device will save a reading every time a button is pressed. This option (manual saving function) is the device's default setting.

### 5.4.1 Activating the manual saving function in the options menu



**To do so:** The device has to be switched on and be in the product selection menu.


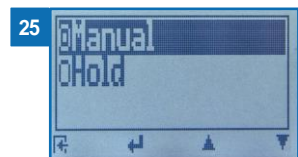
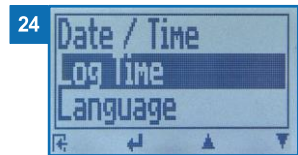
1. Press  three times or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Log Time** (figure 24). To do so, press  or  and confirm by pressing .
4. Select **Manual** (figure 25). To do so, press  or  and confirm by pressing .
  - » The setting has been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.




### 5.4.2 Using the manual saving option

**To do so:** The device has to be in the Data Log menu (see "The menus" page 5). The device is set to Data Log time - Manual.

7. Press .
  - » The display will now appear as shown in figure 27 and the disc symbol will be preceded by the digit one.
8. Press  to enter a name for the saved reading and to finish the measuring process.
  - » The display will now appear as shown in figure 28.
9. The data you have inputted can be overwritten at any time.

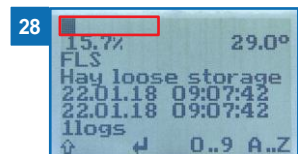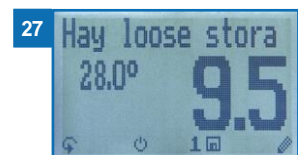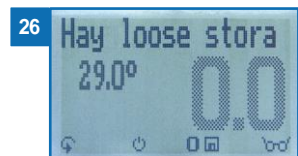


### Inputting letters:



Press and hold **A..Z** to quickly scroll to the required letter and either press it for 3 seconds or press  to confirm the selected letter (figure 29).



### Inputting numbers:

Press and hold **0..9** to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number.

### 10. Moving forward/back:



Press  to switch to another input level. Press  or  to move forward or back.



### 11. Confirm your entry by pressing .

- » The data you entered has been saved.


## 5.5 Saving several readings (a measurement series) at the same time

**To do so:** The device has to be in the Data Log menu (see "Data Log menu" page 5).

1. Take several measurements at different points of the same haystack (see "5. The measuring process").
2. After each measurement, press  to save the reading.
  - » The display will appear as shown in figure 30. The marked number shows the number of readings that have already been saved.
3. Press  to enter a name for the saved measurement series and to finish the measuring process.
  - » The display will now appear as shown in figure 31.
4. The data you have inputted can be overwritten at any time.

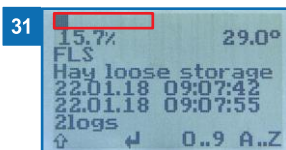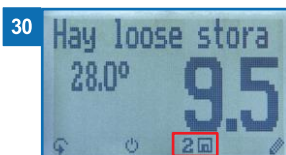


### Inputting letters:




Press and hold **A..Z** to quickly scroll to the required letter and either press it for 3 seconds or press  to confirm the selected letter (figure 32).



### 5. Inputting numbers:


Press and hold **0..9** to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number.

### 6. Moving forward/back:

Press  to switch to another input level. Press  or  to move forward or back.

### 7. Confirm your entry by pressing .

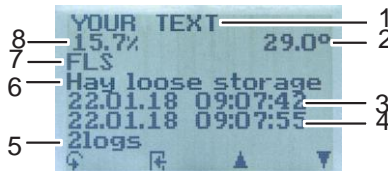



- » The data you entered has been saved.
- » The device automatically determines the average moisture content of the saved measuring values.
- » The display will show the following information:




No	Name
1	Name of the measurement series (editable)
2	Temperature (average)
3	Date & start time of the measurement series
4	Date & end time of the measurement series
5	Number of saved readings
6	Calibration curve
7	Device name
8	Moisture content (average)

## 5.6 Viewing individual readings









**To do so:** You must have saved a reading (e.g. **1 Log**). The display will now appear as shown in figure 33.




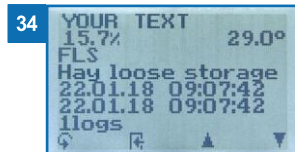
1. Press .
2. Select the required reading. To do so, press  or .
  - » The display will now appear as shown in figure 34.
  - » Press  to leave this screen.



## 5.7 Viewing individual readings from a series of measurements





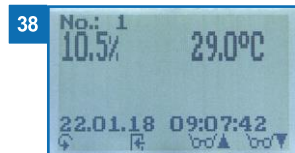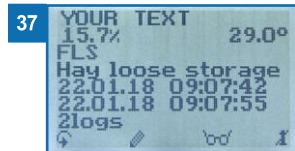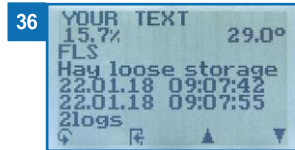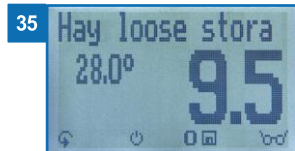





**To do so:** You must have saved a series of measurements (e.g. **2 logs**). The display will now appear as shown in figure 35.



1. Press .
2. Navigate to the required measurement series. To do so, press  or .
  - » The display will now appear as shown in figure 36.
3. Press  to switch to another input level.
  - » The display will now appear as shown in figure 37.
4. Press  again.
  - » The display will now appear as shown in figure 38.
5. Navigate to the required reading (**No.: 1**, **No.: 2**, **No.: 3**). To do so, press  or .
6. Press  to leave this screen.



## 5.8 Deleting all measured values (data log)



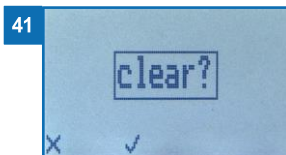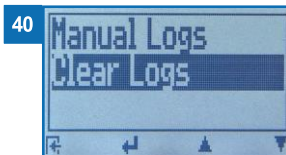


**To do so:** You must have taken and saved one or several readings.




1. Press  three times or hold for 2 seconds.
2. Select **Edit Logs** (figure 39). To do so, press  or  and confirm by pressing .
3. Select **Clear Logs** (figure 40). To do so, press  or  and confirm by pressing 
  - » The display will show the message **clear?** (figure 41).
4. Confirm by pressing 
  - » The data log has been deleted.
5. Press  to leave the **Edit Logs** menu.
6. Press  to leave the main menu.



## 5.9 Deleting individual measurement series

**To do so:** You must have saved a measured value (e.g. 1 log) or a series of measurements (e.g. 3 logs). The display will now appear as shown in figure 42.


1. Press 
  - » The display will now appear as shown in figure 43.
2. Select the required reading. To do so, press  or .
3. Press  to switch to another input level.
  - » The display will now appear as shown in figure 44.
4. Press .

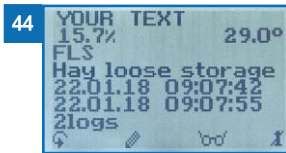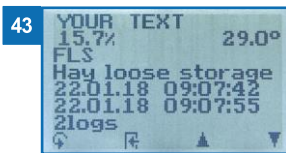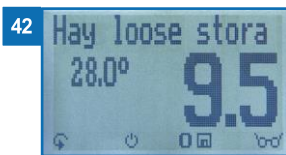

- » The display will then show the message **clear?** (figure 45).

5. Confirm by pressing .

- » The value has been deleted.

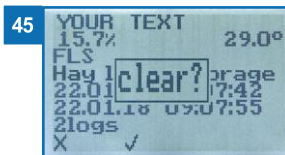



## 5.10 Deleting single values from a series of measurements

**To do so:** You must have saved a series of measurements comprising of at least 2 logs. The display will now appear as shown in figure 46.

1. Press .

- » The display will now appear as shown in figure 47.



2. Select the required reading. To do so, press  or .


3. Press  to switch to another input level.

- » The display will now appear as shown in figure 48.

4. Press .

- » The display will now appear as shown in figure 49.

5. Select the required measured value. To do so, press  or .

6. Press  to switch to another input level.






- » The display will now appear as shown in figure 50.

7. Press  to delete the shown value.

- » The display will then show the message **clear?** (figure 51).

8. Confirm by pressing .

- » The value has been deleted.

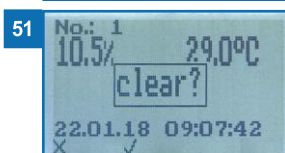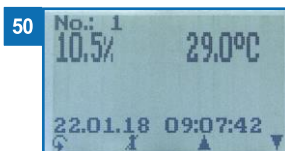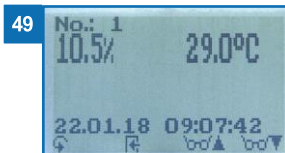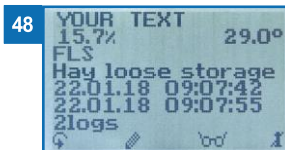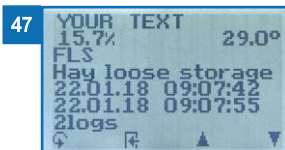

---

## 6. Calibration curves

Calibration curve	Product type	Measuring range
Hay loose storage	loose hay	8 % - 30 %
Empty 1	free curve for special products	
Empty 2	free curve for special products	
Reference	! Only for testing the moisture meter !	

### 6.1 How moisture is defined

The device measures and shows the material moisture content. The moisture content readings are calculated in relation to the material's overall mass:

$$\%WG = \frac{M_n - M_t}{M_n} \times 100$$

$M_n$ : Mass of the sample with average moisture content

$M_t$ : Mass of the sample with zero moisture content

%WG: Moisture content (in accordance with EN ISO 18134-2)

### 6.2 Notes for comparative measurement with oven-drying method

The device uses a much higher sample quantity than the drying oven (12-fold to 20-fold quantity of kiln-drying method). Furthermore, to determine a more accurate average moisture value in case of inhomogeneous material, there can be effected several measurements within a short time.

Considering a sampling error due to the considerably smaller sample quantity as well as the content of volatile matters (resin etc.) that are not water, the kiln-drying method will practically reach an accuracy of approx. +/- 3 %. Therefore, if the measuring values of these two very different methods of determining the water content are compared, differences of +/- 3 % can be considered to be normal.

In the standard EN ISO 18134-2 is declared that the drying oven method provides no absolute values, but only comparable values.


## 7. Using the LogMemorizer program

**To do so:** The device is provided with USB interface, and the USB stick with LogMemorizer software and USB cable are available. Otherwise, you can also install the software at [humimeter.com/software](http://humimeter.com/software) or by scanning the QR code.



### 7.1 Installing / opening the program

1. Insert the USB stick with the LogMemorizer program into the USB port on your computer or
  - » download the LogMemorizer software at [humimeter.com/software](http://humimeter.com/software) or use the QR code.
2. Open the **setup** application.
3. Follow the installation instructions.
4. Open LogMemorizer.
  - » The screen will now display the LogMemorizer's interface (figure 52).

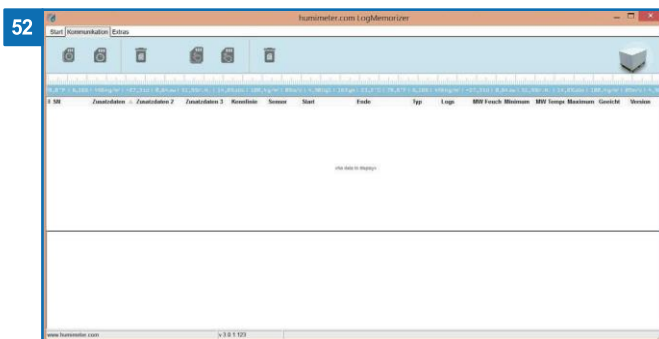

- » Before using LogMemorizer, please refer to the the separate LogMemorizer operating manual for the correct configuration of the USB COM Port.

For more information on LogMemorizer, please refer to the separate LogMemorizer operating manual supplied with the device.

---








## 7.2 Exporting measured values to a computer




**To do so:** The LogMemorizer program is installed. You must have taken and saved one or several moisture readings.

**Options:** You can export moisture readings from the humimeter FLS or initiate the export at your computer.

### Exporting moisture readings from the humimeter FLS

Connect the humimeter FLS to your computer using the supplied USB cable:

1. Insert the USB Mini B connector into the humimeter FLS (figure 53).
2. Insert the USB connector into the computer.
3. Open LogMemorizer on your computer.
4. Switch on the humimeter FLS.
5. Press  three times or hold for 2 seconds.
6. Select **Send Logs** (figure 54). To do so, press  or  and confirm by pressing .
7. Select **Manual Logs** (figure 55). To do so, press  or  and confirm by pressing .
  - » The display will then show the message **Send** (figure 56).
  - » All measuring values saved on the humimeter FLS will now be sent to your computer.

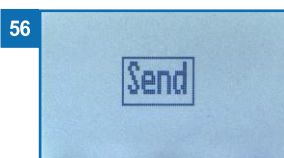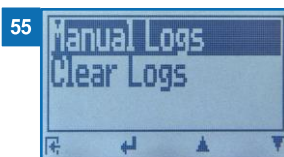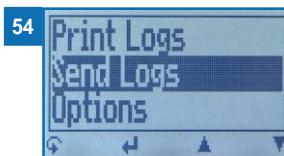


### Initiating the data export at your computer

Connect the humimeter FLS to your computer using the supplied USB cable:


1. Insert the USB Mini B connector into the humimeter FLS (figure 57).
2. Insert the USB connector into the computer.
3. Open LogMemorizer on your computer.



4. Switch on the humimeter FLS.
5. Open the **Communication** tab in LogMemorizer (figure 58).

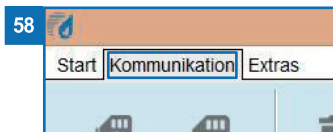

6. Select and click on one of the two buttons shown in figure 59.
  - » **Import all manual logs** (for importing all manually saved readings) or
  - » **Import most recent manual log** (for importing the most recent manually saved logs).

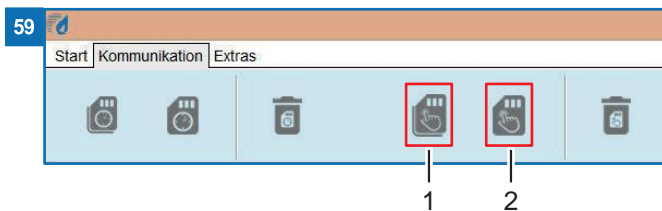





No	Name
1	Import all manual logs
2	Import most recent manual log

- » The measuring values saved on the humimeter FLS will now be sent to your computer.



---

## 8. Checking on the device's status

1. Press  three times or hold for 2 seconds.
2. Select **Status**. To do so, press  or  and confirm by pressing .
  - » The display will then show the status indicator **humimeter**.
  - » The display will show the following information:



No	Name
1	Serial number
2	Software version
3	Battery status
4	Memory status















3. Confirm by pressing .
4. Press  to leave the main menu.


## 9. Configuring the device

### 9.1 Turning on Bluetooth

The information on Bluetooth is provided in a separate operating manual.





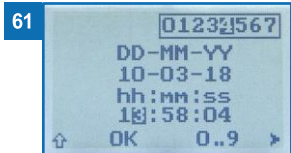







### 9.2 Adjust the date/time

1. Press  three times or hold for two seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Date/Time**. To do so, press  or  and confirm by pressing .
  - » The display will now appear as shown in figure 60.
  - » The format for the date is **DD-MM-YY** (Day-Month-Year).
  - » The format for the time is **hh:mm:ss** (Hour:Minutes:Seconds).
4. **Inputting numbers:**  
Press and hold  to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number (figure 61).
5. **Moving forward:**  
To move forward between **DD-MM-YY** and **hh:mm:ss**, press .
6. **Moving back:**  
Press  to switch to another input level. To move backward between **DD-MM-YY** and **hh:mm:ss**, press .
7. Confirm the date/time by pressing **OK**.
  - » The settings have been saved.
8. Press  to leave the **Options** menu.
9. Press  to leave the main menu.














---


## 9.3 Selecting a language



1. Press  three times or hold for two seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Date/Time**. To do so, press  or  and confirm by pressing .
4. Navigate to the required language. To do so, press  or  and confirm by pressing .
- » The settings have been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

## 9.4 Activating options

**To do so:** Some of the options must be deactivated.

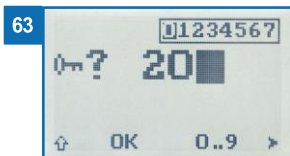1. Press  three times or hold for two seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Unlock**. To do so, press  or  and confirm by pressing .
- » The display will now appear as shown in figure 62.
- » On delivery, the four-digit password is the device's serial number.
4. **Inputting numbers:**  
Press and hold  to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number (figure 63).
5. **Moving back:**  
Press  to switch to another input level.  
To move back, press .
6. Confirm the four-digit password by pressing **OK**.















- » The settings have been saved.
  - » The **°C/°F**, **BL On Time**, **Auto Off Time**, **Materialcalib.**, **Password**, **Reset** options are now activated.
7. Press  to leave the **Options** menu.
  8. Press  to leave the main menu.

## 9.5 Deactivating options

Once the device has been restarted, the **°C/°F**, **BL On Time**, **Auto Off Time**, **Materialcalib.**, **Password**, **Reset** options will be deactivated again.

## 9.6 Selecting °C/°F

**To do so:** All of the options must be activated (see "9.4 Activating options").













1. Press  three times or hold for two seconds.
  2. Select **Options**. To do so, press  or  and confirm by pressing .
  3. Select **°C/°F**. To do so, press  or  and confirm by pressing .
  4. Navigate to the required temperature scale, i.e. Celsius (**°C**) or Fahrenheit (**°F**). To do so, press  or  and confirm by pressing .
  - » The settings have been saved.
5. Press  to leave the **Options** menu.
  6. Press  to leave the main menu.

---

## 9.7 Reducing the device's power consumption













### 9.7.1 Configuring the display illumination time

**To do so:** All of the options must be activated (see "9.4 Activating options").

1. Press  three times or hold for two seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **BL On Time**. To do so, press  or  and confirm by pressing .
4. Select the required display illumination period (30 seconds/2 minutes/5 minutes/10 minutes). To do so, press  or  and confirm by pressing .
- » The settings have been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

### 9.7.2 Configuring automatic switch-off

**To do so:** All of the options must be activated (see "9.4 Activating options").










1. Press  three times or hold for two seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Auto Off Time**. To do so, press  or  and confirm by pressing .
4. Select the period of time you want the device to stay switched on (3 minutes/5 minutes/10 minutes). To do so, press  or  and confirm by pressing .
- » The settings have been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

## 9.8 Configuring the material calibration function


The type calibration function is described in a separate operating manual.


## 9.9 Changing the password




**To do so:** All of the options must be activated (see "9.4 Activating options").

1. Press  three times or hold for two seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Password**. To do so, press  or  and confirm by pressing .
  - » The display will show the current password.
  - » Overwrite the current password. To do so, press and hold  to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number.

### Moving back:

Press  to switch to another input level.









To move back, press .


4. Confirm the new four-digit password by pressing .
  - » The settings have been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

---

## 9.10 Resetting the device to its factory settings

To do so: All of the options must be activated (see "9.4 Activating options").

1. Press  three times or hold for two seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Reset**. To do so, press  or  and confirm by pressing .
  - » The display will then show the message **Reset?** (figure 64).
4. Confirm by pressing .
  - » The device will now be reset to its factory settings. All of your personal settings will be lost.
  - » The display will show the status indicator **humimeter** (figure 65).
  - » Resetting the device will not affect the saved measuring values.

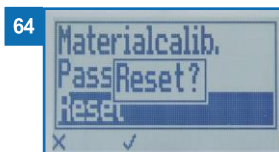

## 10. Cleaning and maintenance

Regularly cleaning and maintaining the device will ensure that it will have a long service life and stay in good condition.


### 10.1 Changing batteries

The device constantly monitors the charge level of the batteries. The current battery status is shown on the status screen.

If the battery's charge is very low, the battery symbol will be shown with an exclamation mark. In that case, the batteries must be changed immediately (figure 67).

For changing the batteries, see section "3.4 Inserting batteries".

As the device's user, you are responsible by law for properly disposing of all used batteries, which must not be disposed of as domestic waste (Battery Directive).

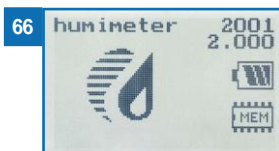

## 10.2 Care instructions

- Do not leave the device out in the rain. The device is not waterproof.
- Do not expose the device to extreme temperatures.
- Protect the device from strong mechanical shocks and loads.

## 10.3 Cleaning the device

### Plastic housing

- Clean the plastic housing with a dry cloth.

### Measuring head

- The measuring head can be cleaned with a cloth and cleaning alcohol.



### **ATTENTION**

#### **Do not clean with fluids**

Water or cleaning fluid getting inside the device can destroy the device.

- ▶ Only clean with dry materials.

---

## 11. Faults

If the measures listed below fail to remedy any faults or if the device has faults not listed here, please contact Schaller GmbH.

Fault	Cause	Remedy
Measuring error	The temperature of the material being measured is too low or high	The temperature of the material being measured has to be between 0 °C and +40 °C.
	Temperature discrepancy between device and material being measured	Let the temperature adjust to the material being measured (permitted difference of max. 3 °C).
	Wrong calibration curve	Check whether you have selected the right calibration curve (product) before taking a reading (see "6. Calibration curves"es").
	Mouldy or rain wet hay Accuracy decreases significantly	Only measure dry, not mouldy hay.
	Frozen hay or hay mixed with snow Accuracy decreases significantly	The measured hay must not be frozen or mixed with snow.
	Water film on the measuring head	After measuring wet hay, on the measuring head may arise a water film. Clean the measuring head (see "10.3 Cleaning the device").
Data transfer to Log Memorizer failed	Interface has not been configured.	The interface only has to be configured once. To do so, press the F1 key on your computer and read the Help file of the Log-Memorizer program.

## 12. Storage and disposal

### 12.1 Storing the device

The device must be stored as follows:

- Do not store outdoors.
- Store in a dry and dust-free place.
- Protect the device from sunlight.
- Avoid mechanical shocks/loads.
- Remove the batteries if the device isn't used for a period of 4 weeks or longer.
- Store the device in its original packaging if it isn't used for a longer period of time.
- Storage temperature: -20 °C to +60 °C

### 12.2 Disposing of the device



Devices marked with this symbol are subject to Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE).

If the device is being operated outside the European Union, the national regulations on the disposal of such devices that apply in the country of use must be observed.

Electronic devices must not be disposed of as domestic waste.

The device must be disposed of appropriately using appropriate collection systems.

---

## 13. Device information

### 13.1 CE declaration of conformity



Name/ Adresse des Herstellers: **Schaller Messtechnik GmbH**  
*Name/ address of manufacturer:* **Max-Schaller-Straße 99**  
**A – 8181 St. Ruprecht**

Produktbezeichnung: **humimeter**  
*Product designation:*

Typenbezeichnung: **BL2 ; BLL ; BLH ; BLW ; FL1 ; FL2 ; FLH ; FLM ; FLS ; RM1 ;  
SLW ; WLW**  
*Type designation:*

Produktbeschreibung: **Messgerät zur Bestimmung des Wassergehalts in  
Biomasse und diversen Schüttgütern**  
*Product description* **Measuring device for determining the water content in bio-  
mass and various bulk materials**

Das bezeichnete Produkt erfüllt die Bestimmungen der Richtlinien:  
*The designated product is in conformity with the European directives:*

**EMV - Richtlinie 2014/30/EC** *EMC Directive 2014/30/EU*  
**RoHS - Richtlinie 2011/65/EG** *RoHS-Directive 2011/65/EU*

Die Übereinstimmung des bezeichneten Produktes mit den Bestimmungen der Richtlinien wird durch die vollständige Einhaltung folgender Normen nachgewiesen:

*Full compliance with the standards listed below proves the conformity of the designated product with the provisions of the above-mentioned EC Directives:*

**EN 61326–1:2013** Elektrische Mess-, Steuer-, Regel- und Laborgeräte - EMV-Anforderungen  
*Electrical equipment for measurement, control, and laboratory use – EMC requirements*

**EN IEC 63000:2019-05** Technische Dokumentation zur Beurteilung von Elektro- und  
*ersetzt / replaced* Elektronikgeräten hinsichtlich der Beschränkung gefährlicher  
**EN 50581:2012** Stoffe.  
*Technical documentation for the assessment of electrical and  
electronic products with respect to the restriction of hazardous  
substances.*


Für das angeführte Produkt ist eine vollständige Dokumentation mit Betriebsanleitung in Originalfassung vorhanden.

*For the mentioned product a complete documentation with manual of instruction in original version is available.*

Bei Änderungen, die nicht vom Hersteller spezifiziert sind, verliert diese Konformitätserklärung die Gültigkeit.

*In case of any changes not agreed upon with the manufacturer, this declaration of conformity loses its validity.*

St. Ruprecht a.d. Raab, 31.07.2022

 **Schaller**  
Messtechnik / humimeter.com  
Schaller Messtechnik GmbH  
Fisg - Schaller - St. Ruprecht a.d. Raab  
AT - 8190 St. Ruprecht a.d. Raab  
www.humimeter.com | info@humimeter.com  
.....  
Bernhard Mauz  
Rechtsverbindliche Unterschrift des Ausstellers  
Legal binding signature of the issuer



## DECLARATION OF CONFORMITY

---

Name/ address of manufacturer: **Schaller Messtechnik GmbH**  
**Max-Schaller-Straße 99**  
**A – 8181 St. Ruprecht**

Product designation: **humimeter**

Type designation: **BL2 ; BLL ; BLH ; BLW ; FL1 ; FL2 ; FLH ; FLM ; FLS ; RM1 ;  
SLW ; WLW**

Product description: **Measuring device for determining the water content in bio  
mass and various bulk materials**

The designated product is in conformity with the following directives:

- **Electromagnetic Compatibility Regulations 2016 Great Britain**
- **RoHS-Directive 2011/65/EU Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment**

Full compliance with the standards listed below proves the conformity of the designated product with the provisions of the above-mentioned Directives:

<b>EN 61326–1:2013</b>	Electrical equipment for measurement, control, and laboratory use – EMC requirements
<b>EN IEC 63000:2019-05</b> replaced <b>EN 50581:2012</b>	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

For the mentioned product, a complete documentation with manual of instruction in original version is available.

In case of any changes not agreed upon with the manufacturer, this declaration of conformity loses its validity.

St. Ruprecht a.d. Raab, 31.07.2022



**Schaller**  
Messtechnik / humimeter.com  
Schaller Messtechnik GmbH  
Maunz - Schaller-Strasse 199  
AT-8180 St. Ruprecht a.d. Raab  
www.humimeter.com | info@humimeter.com  
.....  
Bernhard Maunz  
Legal binding signature of the issuer



---

## 13.2 Technical data

Display resolution	0.1 % moisture content, 0.5 °C/°F temperature
Measuring range	8 % to 30 % water content
Operating temperature	0 °C to +40 °C
Temperature measuring range	-20 °C to +120 °C (only measuring head)
Storage temperature	-20 °C to +60 °C
Temperature compensation	Automatic
Data memory	Up to 10,000 measuring values
Power supply	4 pcs. of 1.5 Volt AA Alkaline batteries
Current consumption	60 mA (incl. display illumination)
Menu languages	English, German, French, Italian, Spanish, Portuguese, Czech, Polish, Russian, International
Display	128 x 64 illuminated matrix display
Device dimensions	2280 x 75 x 45 mm (without handle bar)
Device weight	1,200 g (with batteries)
Device IP rating	IP 40





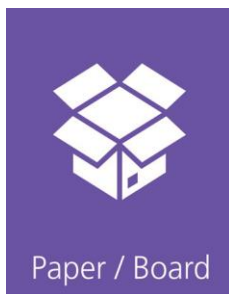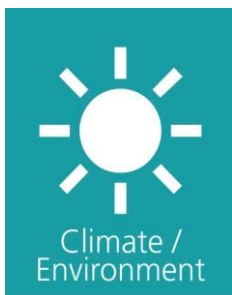

**GRUBATEC**



MESS- UND REGELTECHNIK

Gewerbehaus Ergolz, Wölferstrasse 5  
4414 Füllinsdorf

Telefon: +41 (0)55 617 00 80

Telefax: +41 (0)55 617 00 81

[www.grubatec.ch](http://www.grubatec.ch)  
[sales@grubatec.ch](mailto:sales@grubatec.ch)